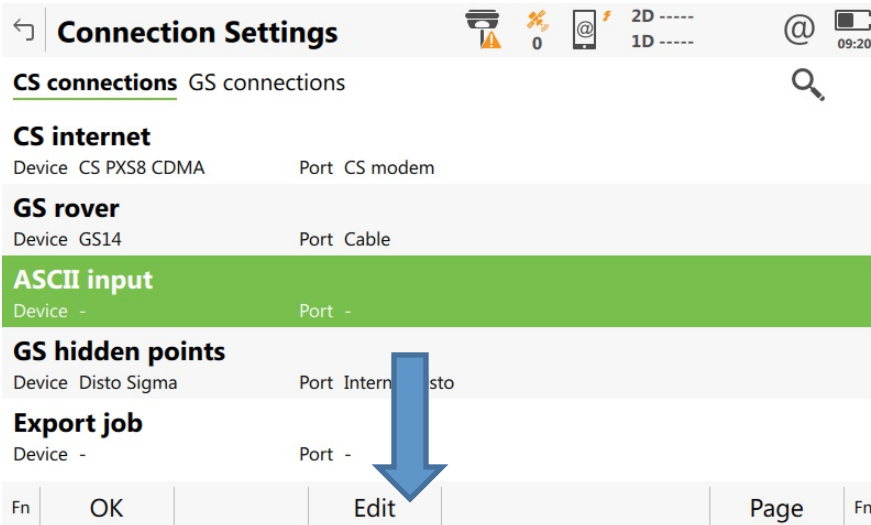From the home screen go to Settings connections all other connections.

Highlight ASCII input.

Select Edit

ASCII Input

ASCII input Annotation 1 Annotation 2 Annotation 3 Annotation 4

Store ASCII data received via an
external device to an annotation   ☑

Connect using   **CS Bluetooth 1** ⌄
Device   **\<CS Bluetooth 1\>**

| Fn | OK | | | Device | Page | Fn |

Check the box store ASCII data received via an.

Use the pull down to choose Bluetooth 1, or Bluetooth 2.

Select Device on the bottom of page.

## Devices (BT)

Modems/GSM **Others**   🔍

\<CS Bluetooth 1\>
Type \<CS Bluetooth 1\>   Creator

RS232
Type RS232   Creator Default

| Fn | OK | New | Edit | Delete | | Page | Fn |

Use the down arrow on the thumb wheel to highlight RS232.

Select New at the bottom of the page.

Fill in the Name

Change the baud to   4800 or 9600
The rest of the settings should match the default, if not match the settings in the picture to the left.

Select Store .

Select OK

Page over to Annotation 1

Check the box Store ASCII data to this annotation.

Message description enter **depth.**

Select OK

ASCII Input

ASCII input   Annotation 1   Annotation 2   Annotation 3   Annotation 4

Store ASCII data received via an
external device to an annotation   ✓

Connect using   **CS Bluetooth 1**   ⌄

Device   Echo Sounder

Bluetooth ID   -----

| Fn | OK | | Search | Device | Page | Fn |

Search for device.

When through select OK.

Connection Settings

CS connections   GS connections   🔍

CS internet
Device CS PXS8 CDMA   Port CS modem

GS rover
Device GS14   Port Cable

ASCII input
Device sonarmite   Port CS Bluetooth 1

GS hidden points
Device Disto gma   Port Internal Disto

Export j
Device -   Port -

| Fn | OK | | Edit | Control | | Page | Fn |

Select OK.